



1 BATTERY INSTALLATION

1. Rotate the battery cover counterclockwise to open it.
2. Insert pre-charged 18650 battery into the battery compartment with the plus side facing forward.
3. Close the battery cover and turn it clockwise to lock it into place.



2 CONTROL BUTTONS

⏻ POWER BUTTON

Short Press: Standby mode/Wake up Device

Long Press: Power On/Off

☀️ LRF BUTTON

Short Press: Turning On the Laser / Distance Measurement

Double Press: Turning Off the Laser

Long Press: Start/Stop Video Recording

MENU MODE

Short Press: Up / Change Parameters

☰ MENU BUTTON

Short Press: Switch Palettes

Long Press: Enter the Menu

MENU MODE

Short Press: Confirm / Set Parameters

Long Press: Save and Exit Menu

🔍 ZOOM BUTTON

Short Press: Setting the Magnification

Long Press: Image Calibration (FFC)

MENU MODE



Short Press: Down / Change Parameters



☀️ + ☰ BUTTONS




Press Simultaneously: Image Capture

3 VIEWING THE THERMAL IMAGE



1. Open the objective lens cap.
2. Long press the POWER button to turn on the device.
3. Hold the monocular and make sure the eyepiece covers your eye.
4. Adjust the diopter by turning the diopter ring until the OSD text or image is clear.
5. Point the monocular towards the target.
6. Bring the object into focus by turning the objective focus ring.
7. For best observation effectiveness, set brightness, contrast, sharpness, image tone and scene mode using the device menu.
8. Activate the **Image Boost** function in the menu for image detail enhancement.
9. Press the MENU button  in live view interface to switch **Palettes** to display the same scene in different effects.
10. Press the ZOOM button  in the view mode to switch **Digital Zoom** between 1x, 2x, 4x, and 8x. The current magnification will be displayed in the upper left corner of the screen.





4 DISTANCE MEASUREMENT

1. Make the laser rangefinder (LRF) settings in the menu.
2. Press the LRF button  to activate LRF.
3. Point the square mark of the rangefinder at the target and press the LRF button  to measure the distance to the target.
4. You can scan the surroundings under **Continuous** mode. Continuous distance scanning will occur for a set time of 5, 10, 15, 30, or 60 seconds after pressing the LRF button .
5. The distance measurement result is displayed at the upper right of the image.
6. Press the LRF button twice to turning off the laser.


5 VIDEO RECORDING

1. In the main live view, hold the LRF button  and start recording.
 2. Hold the LRF button  again to stop recording.
- If you enable the audio function in the menu, the sound will be recorded with the video

6 IMAGE CAPTURE

In the main live view, press the LRF button  and Menu button  simultaneously to capture picture.

ON SCREEN DISPLAY:

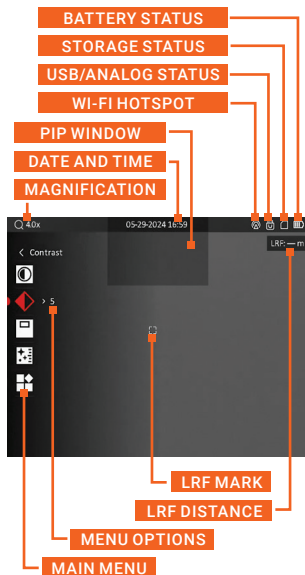

DOWNLOAD THE AGM CONNECT SOFTWARE
IN APP STORE OR GOOGLE PLAY

When connecting a smartphone via a Wi-Fi hotspot, the AGM Connect supports real-time viewing, image capture, video recording, file sharing on social networks, album management, remote settings, and firmware updates.

