

Bushnell®

OPTICSPLANET

 


Model: 18-0832
LIT. #: 98-0377/01-04

Instruction Manual • Manuel D'instructions
Manual de Instrucciones • Bedienungsanleitung
Manuale di Istruzioni • Manual de Instruções

Congratulations on your purchase of a Bushnell® ImageView® binocular. Before using the product, please read the instructions contained in this manual and take time to familiarize yourself with the different parts and features of the product.

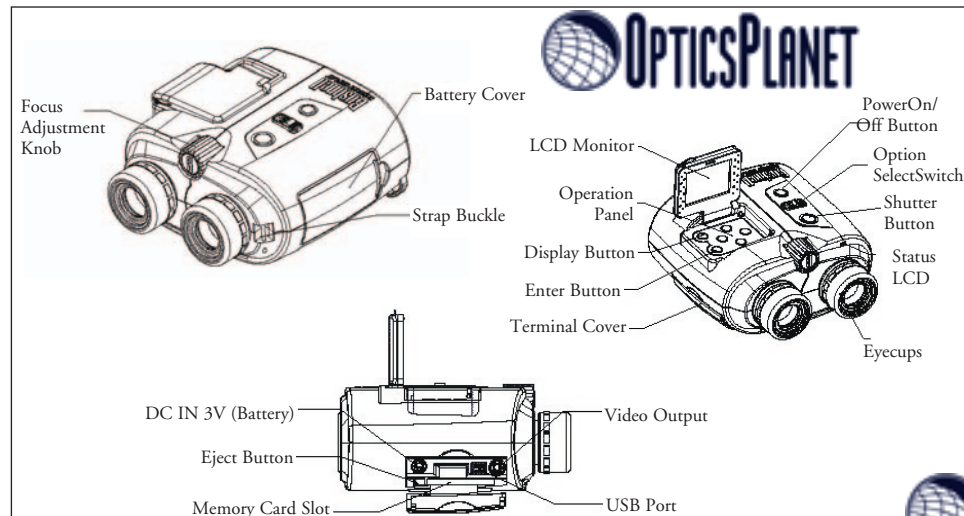



PARTS AND NAMES



SYSTEM OPERATION

Power On				Power On AC adaptor/AA Battery
Capture	Movie Capture	Playback - Still	Playback-Movie	Image/Movie Export
Push the option select switch to still camera mode.	Push the option select switch to movie mode.	Open the LCD monitor.	Open the LCD monitor.	Open the terminal cover.
Open the LCD monitor.	Open the LCD monitor.	Push the option select switch to still camera mode.	Push the option select switch to movie mode.	Use the USB cable to connect.
Adjust the focus knob.	Press the shutter button to start recording.	Press the display button.	Press the display button.	On this mode, the binocular becomes the external hard disk. Edit the movie or image(s) directly.
Press the shutter button.	Press the shutter button again to stop recording.	Use the operation panel to select an image.	Use the operation panel to select a movie.	
	You can record up to a 30 second movie clip. If over 30 seconds, the binocular will keep the last 30 seconds.	Press the enter button (display function mode)	Press the enter button (display function mode)	Exit
		1. Thumbnail 2. Magnify 3. Management 4. Set Up 5. Exit	1. Thumbnail 2. Management 3. Set Up 4. Exit	

 OPERATION GUIDE - Image Capture

<u>Operating Procedure</u>	<u>Picture Description</u>	<u>Binocular Action</u>
1. Press the Power Button		Use the power button to turn the binocular on and off. The LCD will turn off automatically to conserve power if it is left idle (no button or switches operated) for 2 minutes. The camera will turn off the main power to conserve energy if left idle for 5 minutes
2. Push the capture mode of the Option Select Switch to Still Camera Mode.		Now you can take images in capture mode. This procedure selects still image record/playback
3. Open the LCD Monitor		Compose images using either the monitor screen or binocular eyepieces. Focusing should always
4. Adjust the Center Focus Knob to make the image of your subject clear on the LCD monitor.		Turn the focus adjustment knob until the image on the monitor screen is clear.

Operating Procedure

- Press the shutter button to take the picture

Picture Description



Binocular Action

 
The recorded image remains on the monitor for about one second, then restores the original mode.

OPERATION GUIDE - Movie Capture

Operating Procedure

- Press the power button
- Push the Movie mode of the option select switch to Movie mode
- Open the LCD monitor

Picture Description



Binocular Action

Use the power button to turn the binocular on and off. The LCD will turn off automatically to conserve power if it is left idle (no button or switches operated) for 2 minutes. The camera will turn off the main power to conserve energy if left idle for 5 minutes

Now you can record movies in Movie Mode. This procedure selects movie record/playback.

 
 
Compose images using either the monitor screen or binocular eyepiece. Focusing should always be done while viewing the LCD monitor.



Operating Procedure

4. Adjust the Center Focus Knob to make the image of your subject clear on the LCD monitor.
5. Press the shutter button.
6. Press the shutter button again.

Picture Description







Binocular Action

Turn the focus adjustment knob until the image on the monitor screen is clear.

 
 
Start to record movies.

Finish recording movie.
(The movie length is 30 seconds maximum. The Instant Replay will continue to record over the previous movie until the shutter button is pressed for a second time to stop recording. Therefore, the internal memory will always contain the most recent 30 seconds of action recorded.)

Operating Procedure

2. Push the capture mode of the option select switch to Still Camera Mode
3. Open the LCD monitor
4. Press display button
5. Use the   buttons on the operation panel to select the image to be played.
6. Press the enter button for additional playback functions
7. Use the   buttons on the operation panel to select the desired function

Picture Description



Binocular Action

Selects still image record/playback

View images using the monitor screen.

The recorded image is displayed on the monitor

Display the previous or next image stored in the binocular.

Playback Function items appear on the right of the screen

Select the function on the screen.

OPERATION GUIDE - Playback Recorded Images

Operating Procedure

1. Press the power button

 
Picture Description



Binocular Action

Use the power button to turn the binocular on and off. The LCD will turn off automatically to conserve power if it is left idle (no button or switches operated) for 2 minutes. The camera will turn off the main power to conserve energy if left idle for 5 minutes

- Press the enter button



Display Function items appear on the right of the screen.

OPERATION GUIDE - Functions (Playback Recorded Images)

Operating Procedure **Thumbnail Function**



- Use the buttons of the operation panel to select a specific image.

Picture Description



- Press the enter button



Binocular Action

This displays 9 images on the monitor at the same time.

The currently selected image will be framed (highlighted).

The specific image file is displayed on the monitor screen.

- Press the enter button



Restore playback images mode

Operating Procedure **Magnify Function**



- Press the enter button

Picture Description



- Use the buttons of the panel to move the display area vertically or horizontally

Binocular Action

Display the recorded image.

Display the enlarged image currently.

Zoom in on the image:
 "Up Arrow": The image moves up
 "Down Arrow": Image moves down
 "Left Arrow": Image moves left
 "Right Arrow": Image moves right

- Press the enter button



Restore playback images mode



 
 
Operating Procedure

Delete and Lock Function



1. Use the buttons on the operation panel to select the managing file option
2. Press the enter button

Picture Description



Binocular Action

Display the file management screen

 
Use the “Up Arrow” and “Down Arrow” buttons to select the images. Use the “Left Arrow” and “Right Arrow” buttons to select [Exit – Delete – Lock] option

Go back to playback images mode

Set-Up Function



1. Press the display button
2. Press the enter button



You cannot enter the Set-Up Function if no memory card is inserted

Display the setting screen

If a memory card has been inserted, press the enter button, then use the direction arrow buttons to select the settings

 
 
Operating Procedure

Set-Up Function - cont'd

Time and Date

1. Use the buttons on the operation panel to set the Time and Date
2. Press the enter button

Picture Description



Binocular Action

 
 
The Time and Date Setting shows on the screen. Change the number at the highlighting position.

Use the “Left Arrow” and “Right Arrow” buttons to select the highlighting position. And use the “Up Arrow” and “Down Arrow” buttons to change the number.

Go back to still image playback mode

Format CF

1. Use the buttons on the operation panel to select Yes or No.
2. Press the enter button





The “Format CF” setting shows on the screen. Set items at the highlighting position.

Yes – Format CF Card
No – Cancel Format

 
Go back to image playback mode

Operating Procedure

Video Out

1. Use the   buttons on the operation panel to select the Video Out setting
2. Press the enter button

Picture Description





Binocular Action

 
 
The Video Out setting shows on the screen. The default is NTSC (US/Japan video standard)

Choose PAL if applicable to your country (most European and Asian countries)

Go back to image playback mode.

Resolution

1. Use the   buttons on the operation panel to select resolution setting.
2. Press the enter button





The resolution setting shows on the screen. The default is 1600x1200.

The resolution setting shows on screen. The current setting is 800x600.

Go back to playback images mode

Operating Procedure

Sound

1. Use the   buttons on the operation panel to select sound setting.
2. Press the enter button

Picture Description





Binocular Action

The key sound setting shows on the screen. The default is on.

The key sound setting shows on the screen. The current setting is off.

Go back to playback images Mode

Panel Brightness

1. Use the   buttons on the operation panel to select resolution setting.
2. Press the enter button



The panel brightness setting shows on the screen. The current brightness is identified by the arrowhead.

The panel brightness is controlled by the arrowhead.

Go back to playback images mode

Restore the capture mode

Exit

OPERATION GUIDE - Playback Recorded Movies

Operating Procedure

1. Press the power button

Picture Description



Binocular Action

 
Use the power button to turn the binocular on and off. The LCD will turn off automatically to conserve power if it is left idle (no button or switches operated) for 2 minutes. The camera will turn off the main power to conserve energy if left idle for 5 minutes.

2. Push the Movie mode of the option select switch to Movie Mode



Selects Movie record/playback

3. Open the LCD monitor



View movie using the monitor screen.

4. Press display button



The recorded movie is displayed on the monitor

Operating Procedure

5. Use the "Right Arrow" button on the operation panel to play the movie
6. Press the enter button

Picture Description



Binocular Action

Monitor screen is playing. When the movie is finished it will return to the last scene.

Display Function items appear on the right of the screen

OPERATION GUIDE - Functions (Playback Recorded Movies)

Thumbnail Function



1. Use the buttons of the operation panel to select the movie.



This displays 9 movies on the monitor at the same time.

2. Press the enter button







The currently selected movie will be framed (highlighted).



The recorded movie is displayed on the monitor screen.



Operating Procedure

3. Use the  button on the operation panel to play the movie.
4. Use the   buttons to select the movie
5. Use the  button on the operation panel to play the movie
6. Press the enter button

Picture Description



Binocular Action

The monitor displays “Loading Movie” for about 1 second and then plays the movie

The recorded movie is displayed on the monitor

The monitor displays “Loading Movie” for about 1 second and then plays the movie

Go back to movie playback mode

 


Operating Procedure **Delete and Lock Function**



1. Use the buttons on the operation panel to select the managing file option
2. Press the enter button

Picture Description



Set-Up Function



1. Press the display button
2. Press the enter button



Binocular Action

Display the file management screen

Use the   buttons to select the movie. Use the   buttons to select [Exit–Delete–Lock] option

Go back to movie playback mode

You can't enter the Set-Up Function if no memory card is inserted

 
 
Display the setting screen

If a memory card has been inserted, press the enter button, then use the direction arrow buttons to select the settings

Operating Procedure **Time and Date**

1. Use the buttons on the operation panel to set the Time and Date
2. Press the enter button mode

Picture Description



Binocular Action

 
 
The Time and Date Setting shows on the screen. Change the number at the highlighting position.

Use the buttons to select the highlighting position. And use the buttons to change the number.

Go back to still movie playback

Format CF

1. Use the buttons on the operation panel to select Yes or No.
2. Press the enter button



The “Format CF” setting shows on the screen. Set items at the highlighting position.

 
Yes – Format CF Card
No – Cancel Format

Go back to movie playback mode

Operating Procedure **Video Out**

1. Use the buttons on the operation panel to select the Video Out setting
2. Press the enter button

Picture Description



Binocular Action

 
The Video Out setting shows on the screen. The default is NTSC (US/Japan video standard)

Choose PAL if applicable to your country (most European and Asian countries)

Go back to movie playback mode.

Resolution

1. Use the buttons on the operation panel to select resolution setting.
2. Press the enter button



The resolution setting shows on the screen. The default is 1600x1200.

The resolution setting shows on screen. The current setting is 800x600.

Go back to movie playback mode

Operating Procedure

Picture Description

 
Binocular Action

Operating Procedure

Picture Description

Binocular Action

Sound



The key sound setting shows on the screen. The default is on.

Panel Brightness



The panel brightness setting shows on the screen. The current brightness is identified by the arrowhead.

1. Use the   buttons on the operation panel to select sound setting.



The key sound setting shows on the screen. The current setting is off.

1. Use the   buttons on the operation panel to select resolution setting.



The panel brightness is controlled by the arrowhead.

2. Press the enter button



Go back to movie playback Mode

2. Press the enter button



Go back to movie playback Mode



Exit



Restore the movie capture mode

OPERATION GUIDE - Play Back on Television

 
Operating Procedure

1. Connect to the TV

Picture Description



2. Open terminal cover of the device and connect video cable to AV out port.



3. Connect the other end of video cable to the video in port on the TV



4. Connect to the AC adaptor (or battery)



5. Press the Power button



6. Press the TV power



Binocular Action

Make sure that the power of TV and camera are turned off.

While playing images on the TV, the AC adaptor can be powered by

any household power outlet to support the device.

Disconnect:

1. Make sure the camera power is turned off.
2. Remove the video cable.



OPERATION GUIDE - Low Battery Status

1. Press the Power button



2. If the battery capacity goes low, the battery symbol on the screen will flash, a warning beep will be sent out and LED will flash.



3. If the batteries go dead, the battery symbol will appear on the screen and the device will send out a warning beep. Please recharge the battery immediately.



BINOCULAR INSTRUCTIONS - IPD Adjustment (Eye Spacing Adjustment)

 
 
Operating Procedure

Picture Description

Binocular Action

How to Adjust for Distance Between Your Eyes – The distance between the eyes, called Interpupillary Distance (IPD), varies from person to person. To achieve perfect alignment of the lens to the eye, follow these simple steps.

1. Hold your binocular in the normal viewing position
2. Grasping your binocular firmly, move it horizontally until you see a single circular field.

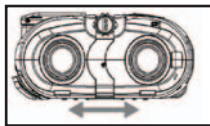

According to the user's interpupillary distance, adjust for the distance between your eyes

Your binocular is fitted with eyecups designed for your comfort and to exclude extraneous light.

BINOCULAR INSTRUCTIONS - Diopter Adjustment (Focusing)

How to Adjust for Individual Eye Strength – As individual eyesight varies from one person to another, most binoculars have a diopter setting feature which allows you to fine-tune the binoculars to your vision. The camera and binocular are set up to be in focus for people with 20/20 vision or corrected vision. You may need to adjust the left eye to match the camera as well as the right eye as you would do with most binoculars. Follow the focusing instructions below for your type of binocular.

 
Operating Procedure

- a. Press the power button

Picture Description



- b. Adjust the interpupillary distance

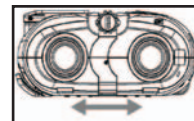

- c. Open the LCD monitor



- d. Adjust the Focus adjustment knob to make the image clear



- e. Look through binocular at the same object that the camera is focused on. If the object is clear for you left eye proceed to step g and then h. If object is not clear in the left eye proceed to step f and then g and h.

Binocular Action

Use the power button to turn the binocular on and off. The binocular will turn off automatically to conserve power if it is left idle (no button or switches operated) for 2 minutes.

According to the user's interpupillary distance, adjust for distance between your eyes

Compose images using wither the monitor screen or the binocular eyepieces

Turn the focus adjustment knob until the image on the monitor screen is clear.

 
Operating Procedure

- f. Turn the screw to relax with a screw driver


Picture Description



- g. Adjust left eye slightly.

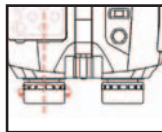

 - h. Adjust the right eye slightly.

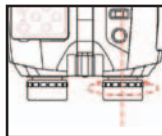

Binocular Action

Allow your eyesight to adjust slightly (Left eye first)

Adjust the diopter to find the clearest focus

Adjust to find the clearest focus
If both barrels of the binocular are in sync with the each other and with the camera, than you only have to turn the center focus knob to adjust the focus for all three.

After adjusting, you can see objects clearly. A different user can adjust to fit his or her needs.
The binocular is now set up for your individual eye sight. The eyepiece adjustments will not affect the camera focus.

Connecting to PC Instructions (Install CD)

If your computer system is Windows ME, Win2000, or Win XP, please skip over this process (the drive is only necessary for Windows 98)

Operating Procedure

1. Turn your computer on.
2. Put the CD into CD-Rom and system will auto-run.
3. Select "Install Driver" to install software. This will install the driver on your computer.
4. Select "Next" to continue.
5. Select the item to install and click the "Install" icon on your computer monitor.
6. Select the item to complete.
Exit the install image.
Click on the Finish Icon.

Picture Description



Binocular Action

Your computer monitor will show the Install image.

Your computer monitor will show a welcome image.

YOU WILL NEED TO RESTART YOUR COMPUTER AFTER INSTALLATION IS FINISHED AND BEFORE CONNECTION CAMERA AND USB CABLE.

 
Connecting to PC Instructions (USB Connection)

Operating Procedure

Picture Description

Binocular Action



- a. Connect the USB cable securely from the Instant Replay USB port to your computer.

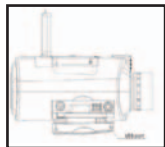

- b. Press the Power button on the Instant Replay.



  - c. The Instant Replay will be recognized as a new (USB) storage device, essentially no different from an external hard drive, which contains your still image and movie files. Using Windows Explorer or “My Computer”, you may view the contents of the Instant Replay CF card/internal memory, clicking on any of the files to view your images and movies. You may save them to your internal hard drive individually, after opening and viewing them in Microsoft Photo Editor or another graphics program. Or you may wish to select some or all of the Instant Replay’s files in Explorer and drag or copy/paste them to a folder on your hard drive, just as you would any normal files.

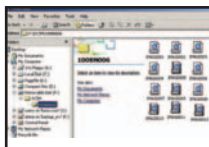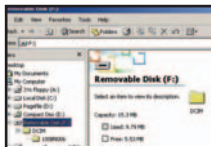

Operating Procedure

Picture Description

Binocular Action

3. Transfer the movies and images to the computer



The monitor shows that it is transferring the files to the selected folder

4. Exit



Pick the icon of task tray on your computer screen and select exit to disconnect the USB cable.



TWO-YEAR LIMITED WARRANTY

Your Bushnell® product is warranted to be free of defects in materials and workmanship for two years after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Bushnell Authorized Service Department.

Any return made under this warranty must be accompanied by the items listed below:

- 1) A check/money order in the amount of \$10.00 to cover the cost of postage and handling
- 2) Name and address for product return
- 3) An explanation of the defect
- 4) Proof of Date Purchased
- 5) Product should be well packed in a sturdy outside shipping carton, to prevent damage in transit, with return postage prepaid to the address listed below:

IN U.S.A. SEND TO:

Bushnell Performance Optics
Attn.: Repairs
8500 Marshall Drive
Lenexa, Kansas 66214

IN CANADA SEND TO:

Bushnell Performance Optics
Attn.: Repairs
25A East Pearce Street, Unit 1
Richmond Hill, Ontario L4B 2M9

For products purchased outside the United States or Canada please contact your local dealer for applicable warranty information. In Europe you may also contact Bushnell at:

BUSHNELL Performance Optics GmbH
European Service Centre
MORSESTRASSE 4
D- 50769 KÖLN
GERMANY
Tél: +49 (0) 221 709 939 3
Fax: +49 (0) 221 709 939 8

This warranty gives you specific legal rights.
You may have other rights which vary from country to country.
©2004 Bushnell Performance Optics

Bushnell®

FRANÇAIS



Model: 18-0832
LIT. #: 98-0377/01-04

Manuel D'instructions