

Riflescope Ring Mounts User Manual



Read Carefully Before Use
Keep for Future Reference

Disclaimer

Read this disclaimer completely and carefully before proceeding with the rest of the manual content.

1. **As-Is**

This Gunnr product is sold 'as is' and without any express or implied warranties, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

2. **Product Modifications**

Any modifications or alterations to Gunnr products void any warranties and may result in damage or injury. Gunnr shall not be liable for any damages resulting from such modifications or alterations.

3. **Compliance with Laws**

Customers shall be liable for ensuring that the use of Gunnr products complies with all applicable laws and regulations in their respective jurisdictions. Gunnr assumes no responsibility for any violations of laws or regulations resulting from the use of Gunnr products.

4. **Correct Use**

Always use Gunnr products only as directed in the accompanying manuals. Failure to follow instructions may result in injury or damage.

Always ensure the assembly, installation, operation, maintenance, or repair of Gunnr products is carried out by a competent person.

Always make maintenance regularly throughout Gunnr products' lifecycles; you have the liability to keep the products operating as intended.

Always wear appropriate protective gear.

5. **Third-Party Products**

Gunnr shall not be liable for any damages or losses resulting from the use of third-party products in conjunction with Gunnr products. Customers shall refer to the third-party's guidelines or/and warranties (if any) for any third-party products used.

6. **Limitation of Liability**


Gunnr shall not be liable for any direct, indirect, punitive, incidental, special, or consequential damages to property or life, whatsoever arising out of or connected with the use or misuse of Gunnr products. In no event shall Gunnr's liability exceed the value of the products sold.

This disclaimer states the entire obligation of Gunnr with respect to Gunnr products. If any part of this disclaimer is determined to be void, invalid, unenforceable, or illegal, including but not limited to the warranty disclaimers, liability disclaimers, and liability limitations set forth above, the invalid or unenforceable provision will be deemed superseded by a valid and enforceable provision that most closely matches the intent of the original provision and the remainder of the agreement shall remain in full force and effect.

Specifications

Material	7075 Aluminum Alloy	
Compatible Scope Tube Diameter	1.18 in./30 mm	1.34 in./34 mm
Compatible Rail Type	20 mm Picatinny Rail	
Base Bolt Torque	30 in.-lb.	
Top Bolt Torque	20 in.-lb./2.26 N·m	
Dimensions	1.9×1.8×0.8 (in.) 48×44.97×20 (mm)	2×1.9×0.8 (in.) 50.3×49.13×20 (mm)
Net Weight	3.32 oz./94 g	3.18 oz./90 g

Product Diagram

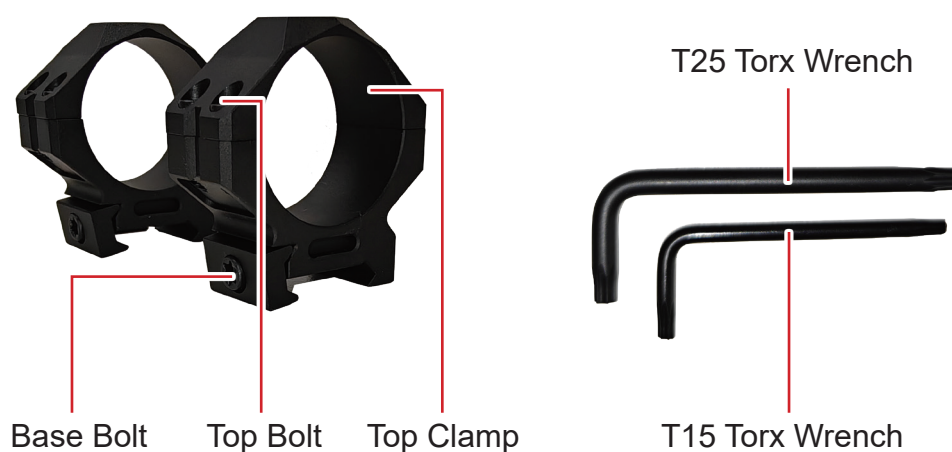

Installation

Warning

- **ALWAYS** ensure your weapon is completely unloaded before mounting.
- **ALWAYS** ensure the ring mounts are compatible with your gun-scope combination.

1. Unscrew all the top bolts with the provided T15 torx wrench, then remove the top clamps.



Installation

2. Loosen the base bolts with the provided T25 torx wrench.



3. Fit the ring mounts onto the Picatinny rail of your rifle, ensuring that the spacing between the two mounts is appropriate for your riflescope.
4. Retighten the base bolts to 30 in.-lb.


Warning

ALWAYS torque the bolts down to their stated torques. Insufficient torquing can lead to a blurry view due to recoil; over-torquing can damage the structure of the scope.

5. If your riflescope has adjustable magnification, set it to the maximum.
6. Place the central parts of your riflescope's tube on the ring mounts with its objective lens pointing towards the muzzle and away from the stock.

Warning

DO NOT use any flared sections of the tube to avoid damaging or interrupting the functionality of your riflescope.

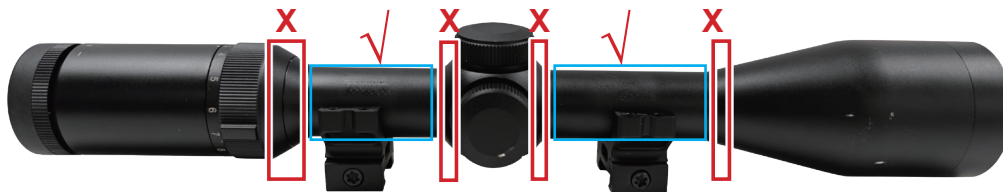

7. Move the riflescope fore and aft in the rings as needed until you achieve a full, unobstructed view through the scope.

Warning

For a bolt-action rifle, **ALWAYS** ensure that the position of your riflescope does not obstruct the smooth operation of the bolt action.



Installation

8. Without disturbing the fore-aft placement, rotate the riflescope until the reticle is vertically aligned with the rifle and the elevation adjustment turret is on top.

Use leveling tools such as feeler gauges or bubble levels and a plumb bob for help as needed.



9. Replace the removed top clamps and top bolts.
10. Retighten the top bolts to 20 in.-lb.

Warning

ALWAYS torque the bolts down to their stated torques. Insufficient torquing can lead to a blurry view due to recoil; over-torquing can damage the structure of the scope.

Note:

Alternately tighten the top bolts on each side so that the gaps between the top and base parts of the mounts are even on both sides.



11. After mounting, if you find the riflescope's initial aim to be far off zero:
 - a. Remove the scope from the ring mounts and the ring mounts from the rifle.
 - b. Restart the process from Step 1.

Maintenance

- Regularly clean the exterior surface of the ring mounts with a soft, damp cloth.
- **DO NOT** use abrasive cleaners or caustic chemicals.
- Check all parts of the ring mounts for any looseness, wear, or damage between uses. Retighten any loose bolts to their stated torque, and repair or replace any problematic parts before further use.
- If the ring mounts will not be used for a prolonged period, remove the riflescope from them, remove them from the rifle, and store them in a cool, dry place away from direct sunlight and inaccessible to children.

Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at **support@gogunnr.com** and we'll resolve your issue ASAP!

For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.



M O N - F T 0 1 - 3 0

M O N - F T 0 1 - 3 4

Rev. 30 Spet. 2024