

AR Adjustable Module Trigger

Operators Instruction Manual



3149 Nest Ave. – Sheldon, IA 51201
Phone: 712-324-7409
Email: support@jardinc.com – www.jardinc.com



WARNING

This firearm is intended for use only by experienced competitive shooters and professionals. You must take responsibility for your own actions. We will not be responsible for any loss, injury, or death resulting from the use or misuse of this product.

The handling and use of firearm bears with a certain unavoidable risks, like sky diving and rock climbing. If you are not willing to accept responsibility for your own actions, guns are not for you.

The use of any custom parts or modifications may void any warranty from the manufacturer of your firearm.

Returns will not be accepted on any parts that have been modified.

If you do not have a thorough understanding of the Jard AR Adjustable Module Trigger and the purpose and function of all the parts, do not attempt to install this system. Have it installed by an experienced gunsmith.

JARD AR Adjustable Module Replacement Trigger

Trigger Installation Instructions


1. Remove the magazine and visually check the chamber before further handling the rifle, to verify it is not loaded
2. Remove the take down pins and separate the upper and lower assemblies.
3. Remove the pistol grip along with the safety, spring, and detent.
4. With a plastic mallet and drift, remove the trigger pins and original trigger components (a plastic mallet and drift will prevent damage to the receiver). The original pins will be used in the installation of the new system
5. Place the trigger assembly into the lower receiver, align and install the original trigger and hammer pins into the assembly.
6. Tighten down the retaining screws (8B) clockwise until they are snug. Use blue thread locker to ensure screws do not loosen.

Trigger Adjustment Instructions

Your Jard Trigger comes pre-adjusted from the factory. However, due to differences in lower receivers as well as personal preference, it may be necessary to make adjustments to the trigger.

1. Place the hammer in the cocked position. With a 1/16" hex key turn the sear engagement screw (8A) until the sear disconnects from the hammer, then back off the screw until a safe amount of sear engagement is achieved. (Insufficient engagement can cause double fires on semi auto rifles) (On two stage units a greater amount of engagement is needed) !
WARNING
2. While the assembly is in the cocked position turn the disconnect screw (7) (use 5/64" hex key) so you can push down on the hammer and feel it brush against the hook of the disconnect as much as possible without hooking. (Two stage units, adjust so the disconnect contacts the hammer just prior to the trigger releasing the hammer)
3. Install the safety into the lower receiver. Turn the safety so the flat portion is facing the front of the lower receiver. The safety in this position allows access to the safety adjustment screw. With a 1/16" hex key adjust the screw by turning counterclockwise up to contact the safety shaft in the safe position. No trigger movement is preferred for single stage units, two stage units may require a small amount of movement to allow for sear hammer disconnect.
4. The spring tension screw (9) can be adjusted clockwise to increase pull and counter clockwise to decrease pull weight. If adjusted too tight the trigger will not move, adjusted too light the trigger will not reset properly.
5. If screws begin to turn easy it may be necessary to apply blue thread locker to prevent trigger from coming out of adjustment.

Trigger Assembly Parts Breakdown

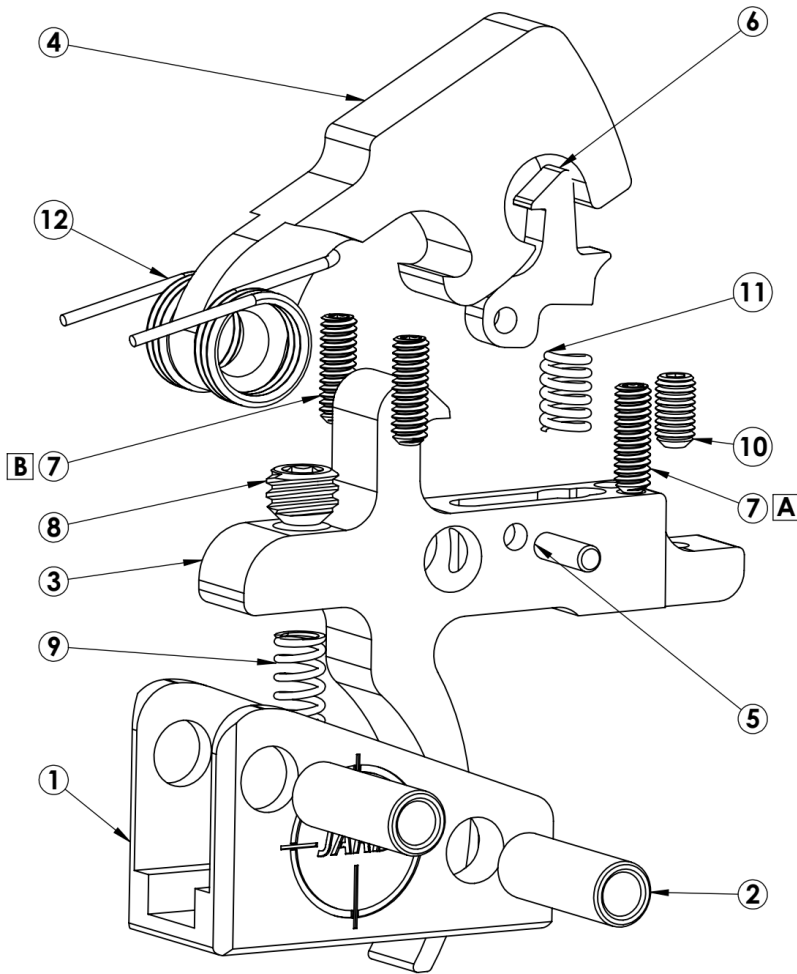

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	4096	Housing, AR Modular	1
2	3687	Bushing, Hammer / Trigger	2
3	4114	Trigger, AR Curved Mod. Adj,	1
4	4115	Hammer, AR Module Adjust	1
5	1352	Dowel Pin	1
6	1167	Disconnect	1
7	1475	Set Screw	3
8	2868	Spring Tension Screw	1
9	1016	Spring	1
10	1123	Overtravel Screw	1
11	1017	Trigger Spring	1
12	2327 4691	Hammer Spring Standard Heavy	1

JARD, Inc.

3149 Nest Ave. – Sheldon, IA 51201

Phone: 712-324-7409 – Email: support@jardinc.com

www.jardinc.com