



# SPORT BINOCULAR ADAPTER

PRODUCT MANUAL



## INCLUDED:

- a. Lock Washer
- b. Post

- c. Screw
- d. Receiver Base
- e. 1.3mm Hex Wrench



## INSTRUCTIONS:

1. Remove cap covering the binocular tripod adapter socket.
2. Insert lock washer into cut space on post.  
Then, install screw.
3. Using the 1.3mm Hex wrench, tighten the post portion to binocular. **DO NOT OVERTIGHTEN.**
4. Attach adapter to tripod.



- a. **With Base:** Connect receiver base to tripod and place post into receiver.



**Note:** Be sure to remove the binocular from the receiver base before moving the tripod. (The binocular is not fastened to the receiver base.)

- b. **Without Base:** Connect the post portion directly to the tripod.



# **VIP WARRANTY**

**OUR UNCONDITIONAL PROMISE TO YOU.**

We promise to repair or replace the product. Absolutely free.

**Unlimited.**

**Unconditional.**

**Lifetime Warranty.**

service@VortexOptics.com • 1-800-4VORTEX

*Note: The VIP Warranty does not cover loss, theft, deliberate damage, or cosmetic damage not affecting product performance.*

For the most up to date manual visit  
VortexOptics.com

M-00318-0

© 2021 Vortex Optics

® Registered Trademark and TM Trademark of Vortex Optics