
"Our Gustomer's Life Depends on It"

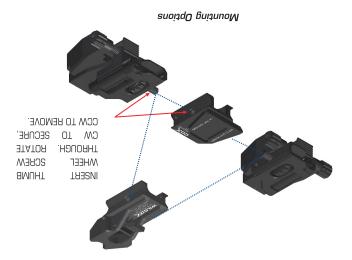

The Wilcox Binocular Bridge System is shipped assembled to accommodate a binocular configuration. If desired to be used as a monocular, determine your dominant eye and remove the opposite arm assembly by rotating the thumb wheel counter-clockwise until the arm is removed, as depicted below. For monocular only configuration, Arm Assembly can be assembled on either side of the mounting shoe base to accommodate dominant eye mounting. The system features a Modular Dovetail Base for mounting to the Wilcox G24 dovetail interface mount, and a Horn Assembly Base for mounting to the Wilcox G11 or compatible horn interface mount.

STEP 1 - Set Configuration to User's Need

CONFIGURATION

STANDARD LIMITED WARRANTY

For full warranty terms, contact Wilcox Customer Service at 603-431-1331.

WARRANTY CLAIM AND SERVICE INFORMATION

Wilcox must be contacted in the United States at (603) 431-1331 to assign a **Return Merchandise Authorization (RMA) / Service Call Number (SC)** prior to return shipment.

After an RMA/SC number is provided, Wilcox will accept a package at the address below, clearly marked with the number assigned as follows:

Wilcox Industries Corp.
RMA # _____
25 Piscataqua Drive
Newington, NH 03801

The product must be securely packaged, accompanied by purchasing information, a letter including sender's name, address, daytime phone number, date of manufacture, lot number and a description of the problem or work to be performed.

Manufactured by:

WILCOX"

Wilcox Industries, Corp. 25 Piscataqua Drive Newington, NH 03801-7816

Phone: +1 888-8WILCOX +1 603-431-1331 Fax: +1 603-431-1221







WWW.WILCOXIND.COM

For troubleshooting service questions, contact Wilcox between 8am and 5pm EST.

WeiV Jnor7

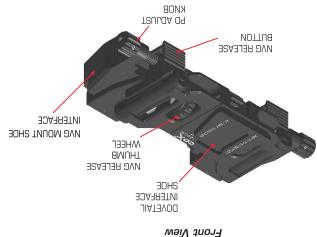

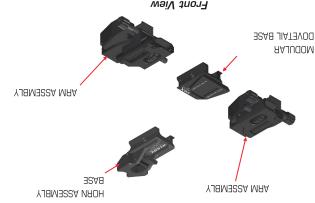

PRODUCT IDENTIFICATION

OPERATION AND MAINTENANCE INSTRUCTIONS FOR THE

WILCOX®

Binocular Bridge System for the SkeetIR Night Vision Monocular with Horn Assembly Base CAGE: 004F1



Binocular Bridge System for the SkeetIR Night Vision Monocular with Horn Assembly Base


PN 61300G06 Trijicon SkeetIR Right-Left Arm Kit PN 61300G16 PVS-14 Dovetail Right-Left Arm Kit



© 2013-2022 Wilcox Industries Corp. All rights reserved. Printed in USA. Wilcox's Binocular Bridge Systems are Patent Pending. Wilcox's, Mount Up!'s and the Wilcox "X" Logo are federally registered trademarks of Wilcox Industries Corp. "Our Customer's Life Depends on It!" is a trademark of Wilcox Industries Corp. All other trademarks and federally registered trademarks in this manual are the property of their respective companies. Specifications and other data are subject to change without notice. **EAR Controlled: Commerce license may be required for export or re**

CONFIGURATION (CONT'D)


STEP 3 - To Attach and Detach the Binocular Bridge System to the Wilcox G24 NVG Mount:

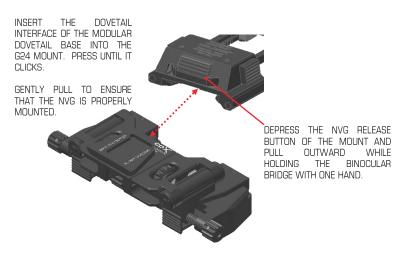

STEP 4 - To Mount an NVG to the Binocular Bridge System (Depicted with Single Monocular):



To Attach and Detach the Binocular Bridge System from the Wilcox G11 NVG Mount:

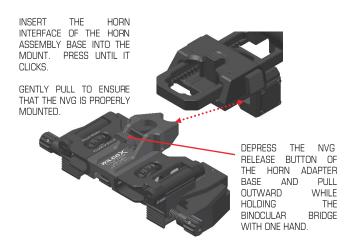

STEP 5 - To Set the NVG to the Proper Inter-Pupillary Position:

Once the binocular or monocular is installed, the Wilcox Binocular Bridge System provides a stop plate that can be adjusted and PD Adjustment Knob that allow the operator to adjust the stop settings on the binocular to prevent the optic from overshooting the eye when placed in the operational position.



GENERAL OPERATION

STEP 1 - To Stow the Goggle on the Helmet (Depicted in Binocular Configuration) with Wilcox G24 Mount:



STEP 2 - To Restore the Goggle to the Deployed Position:

Perform steps for stowing in reverse. After flipping the goggle downward, simply press the goggles inward to restore the pre-set inter-papillary distance as defined by the PD Adjustment (refer to Configuration, Step 5).

CARE AND MAINTENANCE

Clean the Mount by flushing away dirt with fresh water and/or wiping down the assemblies with a clean, damp cloth. If used in a salt water environment, flushing with fresh water and drying after use is recommended. If used extensively in a salt water environment, lightly lubricate stainless steel parts as needed. Vertical and horizontal adjustment and release mechanisms that are not kept free from debris may bind. Lubricate lightly as needed with a non-corrosive lubricant provided by your unit armorer.