TRITON

PRODUCT GUIDE

# STARSTRIKE GEN 2

## CONTROLS & MENU

TF520 / TF318 / TF520-V2

**STAY FROSTY.**

# KNOW YOUR CONTROLS

This guide covers the controls and menu options for TF520, TF318 and TF520-V2. The control panel has six square buttons and one round Power button. Button functions depend on the active screen.

Short press: press and release immediately.
Press and hold: keep the button pressed until the described action occurs.

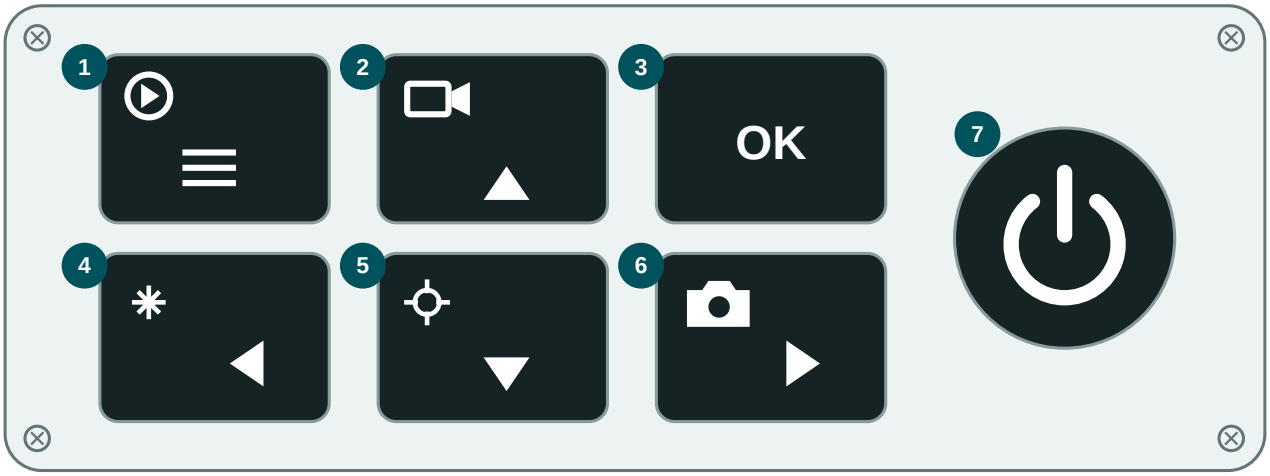


Use the numbered control-panel graphic to identify each button in the instructions.

1 Playback / Menu  2 Video / Up / Zoom in  3 OK
4 IR / Left  5 Reticle / Down / Zoom out
6 Photo / Right  7 Power

## Navigation

Use the directional buttons to navigate playback files and menus. Press and release OK to confirm the highlighted selection.

## Before handling an attached optic

Confirm that the firearm is unloaded and keep it pointed in a safe direction. Follow the model-specific battery and memory-card requirements; do not substitute specifications from another product.

## Integrated mount | 30 in-lb

Secure the integrated mount to the rifle rail. Tighten the integrated mount’s rail-clamp hardware to 30 in-lb.

# PHOTOS, VIDEO & PLAYBACK

## Take a photo

01 In the viewing screen, press and release the Photo / Right [6] button.

02 A blue camera icon briefly appears, then disappears, indicating an image was taken.

## Record video

01 Press and hold the Video / Up [2] button, identified by its video-camera icon.

02 A red dot and an elapsed-time counter appear while recording.

03 Press and hold the same button again to pause recording.

## View saved files

01 Press and hold the Playback / Menu [1] button to open playback.

02 Use the arrow buttons to select a photo or video. Press and release OK [3] to play a selected video.

03 While in playback, press and release the Playback / Menu [1] button to delete the selected file. Follow any on-screen prompts.

04 Press and hold the Playback / Menu [1] button to exit playback.

Back up files you want to keep before deleting or formatting. A photo or recording indicator does not replace checking the saved file in playback.

# RETICLE & VIEWING CONTROLS

A reticle is the aiming mark shown on the display. Button numbers refer to the graphic on page 2.

## Show or hide the reticle

Press and hold the Reticle / Down [5] button to toggle the reticle on or off.

## Select a reticle

01 Make sure the reticle is visible on the screen.

02 Press and hold OK [3] until the reticle turns black.

03 Press and hold OK [3] to change the reticle. Repeat as needed until the desired reticle is displayed.

04 Press and release OK [3] immediately to lock in the selection.

## Move the reticle

With the reticle visible, press and hold OK [3] until it turns black. Use the directional arrows to move the reticle in the intended direction. When finished, press and release OK [3].

## Change IR level

Press and release the IR / Left [4] button to cycle through OFF, IR1, IR2 and IR3. The IR illuminator and the Day/Night viewing mode are separate controls.

## Zoom and illumination

Video / Up [2] increases magnification. Reticle / Down [5] decreases magnification and is also assigned to illumination selection.

## Manual focus ring

This model uses a manual focus ring. Turn the ring until the target or scene appears sharp. Refocus as the viewing distance changes. Zoom changes image size; it does not replace focusing.

# MENU REFERENCE

Use this reference to identify the available menu settings and options.

## Auto Record | On / Off (Eco)

Turn automatic recording on or off.

## Loop Timer | Off / 5 min / 10 min / 15 min

Divides continuous video recording into clips of the selected duration.

## Day/Night Mode | Day / Night

Select Day mode for daytime color viewing and recording, or Night mode for infrared viewing. Select Day mode for natural daytime colors.

## IR Level | Off / IR1 / IR2 / IR3

Select the infrared illuminator setting. Off disables IR illumination; it does not select Day mode.

## Brightness | Screen brightness

Adjust the brightness of the display.

## Charging Tips | Off / 3 min / 5 min / 10 min

Sets the interval between battery-charge reminders. Select Off to disable reminders.

## Auto Power Off | Off / 20 min / 30 min / 40 min

Select an automatic shutdown interval. Off disables the automatic shutdown timer.

## Continuous external power

All Triton DNV models can operate continuously from a compatible external power source, such as a power bank, while that source supplies power. Connect the power source to the device’s power input using a compatible cable.

## Need help?

Visit tritonwild.com/pages/contact for product support.