TRITON

PRODUCT GUIDE

STARSTRIKEX 1-6x

CONTROLS & MENU

STARSTRIKEX 1-6x

STAY FROSTY.

KNOW YOUR CONTROLS

StarstrikeX provides 1-6x digital magnification without an additional magnifier. This guide covers its controls and menu options. The control panel has six square buttons and one round Power button. Button functions depend on the active screen.

Short press: press and release immediately.
Press and hold: keep the button pressed until the described action occurs.

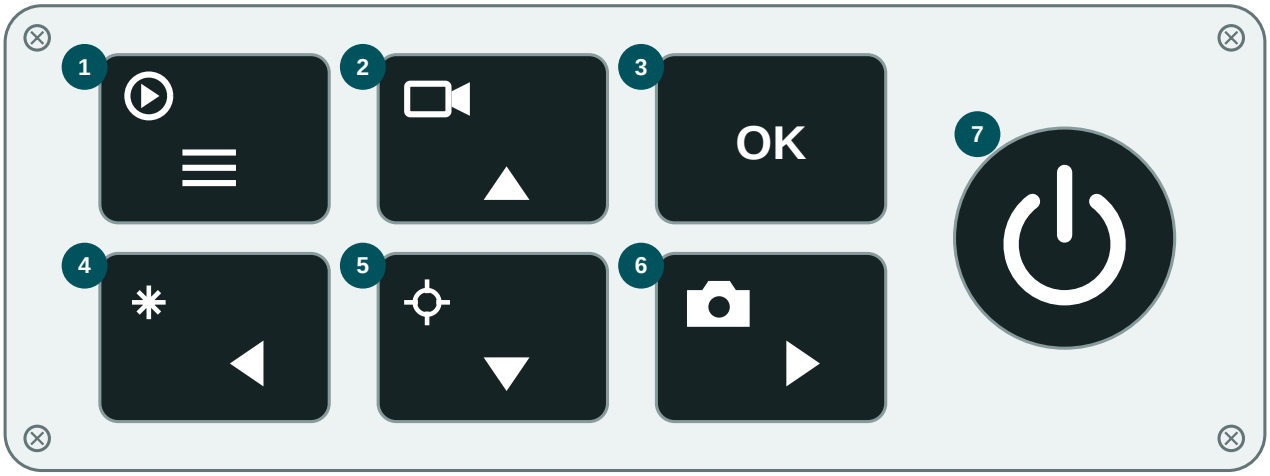

Use the numbered control-panel graphic to identify each button in the instructions.

1 Playback / Menu 2 Video / Up / Zoom in 3 OK
4 IR / Left 5 Reticle / Down / Zoom out
6 Photo / Right 7 Power

Navigation

Use the directional buttons to navigate playback files and menus. Press and release OK to confirm the highlighted selection.

Before handling an attached optic

Confirm that the firearm is unloaded and keep it pointed in a safe direction. Follow the model-specific battery and memory-card requirements; do not substitute specifications from another product.

Integrated mount | 30 in-lb

Secure the integrated mount to the rifle rail. Tighten the integrated mount’s rail-clamp hardware to 30 in-lb.

PHOTOS, VIDEO & PLAYBACK

Take a photo

01 In the viewing screen, press and release the Photo / Right [6] button.

02 A blue camera icon briefly appears, then disappears, indicating an image was taken.

Record video

01 Press and hold the Video / Up [2] button, identified by its video-camera icon.

02 A red dot and an elapsed-time counter appear while recording.

03 Press and hold the same button again to pause recording.

View saved files

01 Press and hold the Playback / Menu [1] button to open playback.

02 Use the arrow buttons to select a photo or video. Press and release OK [3] to play a selected video.

03 While in playback, press and release the Playback / Menu [1] button to delete the selected file. Follow any on-screen prompts.

04 Press and hold the Playback / Menu [1] button to exit playback.

Back up files you want to keep before deleting or formatting. A photo or recording indicator does not replace checking the saved file in playback.

RETICLE & VIEWING CONTROLS

A reticle is the aiming mark shown on the display. Button numbers refer to the graphic on page 2.

Show or hide the reticle

Press and hold the Reticle / Down [5] button to toggle the reticle on or off.

Select a reticle

01 Make sure the reticle is visible on the screen.

02 Press and hold OK [3] until the reticle turns black.

03 Press and hold OK [3] to change the reticle. Repeat as needed until the desired reticle is displayed.

04 Press and release OK [3] immediately to lock in the selection.

Move the reticle

With the reticle visible, press and hold OK [3] until it turns black. Use the directional arrows to move the reticle in the intended direction. When finished, press and release OK [3].

Change IR level

Press and release the IR / Left [4] button to cycle through OFF, IR1, IR2 and IR3. The IR illuminator and the Day/Night viewing mode are separate controls.

Zoom and illumination

StarstrikeX has a 1-6x magnification range. Video / Up [2] increases magnification. Reticle / Down [5] decreases magnification and is also assigned to illumination selection.

Manual focus ring

This model uses a manual focus ring. Turn the ring until the target or scene appears sharp. Refocus as the viewing distance changes. Zoom changes image size; it does not replace focusing.

MENU REFERENCE

Use this reference to identify the available menu settings and options.

Auto Record | On / Off (Eco)

Turn automatic recording on or off.

Loop Timer | Off / 5 min / 10 min / 15 min

Divides continuous video recording into clips of the selected duration.

Day/Night Mode | Day / Night

Select Day mode for daytime color viewing and recording, or Night mode for infrared viewing. Select Day mode for natural daytime colors.

IR Level | Off / IR1 / IR2 / IR3

Select the infrared illuminator setting. Off disables IR illumination; it does not select Day mode.

Brightness | Screen brightness

Adjust the brightness of the display.

Charging Tips | Off / 3 min / 5 min / 10 min

Sets the interval between battery-charge reminders. Select Off to disable reminders.

Auto Power Off | Off / 20 min / 30 min / 40 min

Select an automatic shutdown interval. Off disables the automatic shutdown timer.

Continuous external power

All Triton DNV models can operate continuously from a compatible external power source, such as a power bank, while that source supplies power. Connect the power source to the device’s power input using a compatible cable.

Need help?

Visit tritonwild.com/pages/contact for product support.