
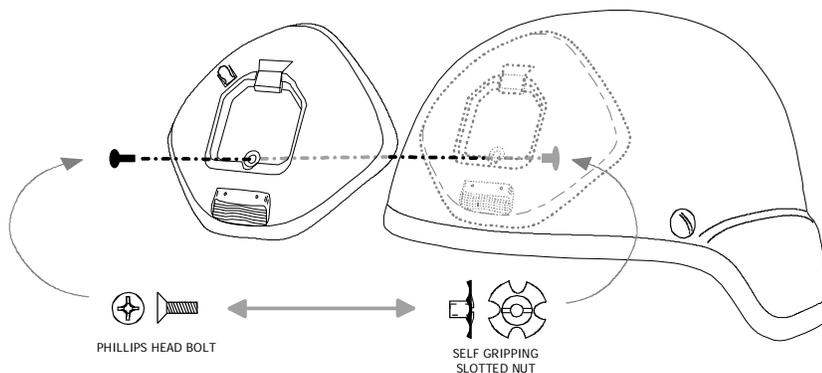


Technical Data Sheet

Norotos #1726010 Low Profile Interface Shroud for a One Hole MICH

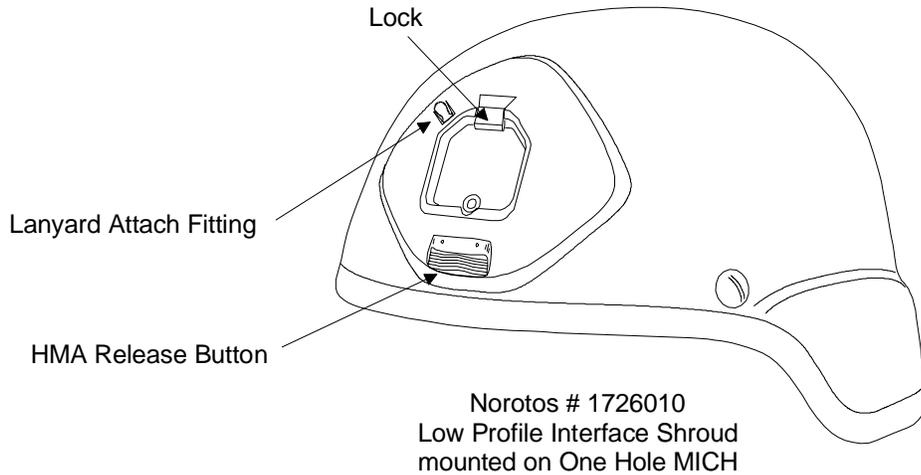

Installation of Low Profile Interface Shroud

One Hole Shroud Attachment: Insert the supplied slotted nut [female] in the hole from inside the helmet. Place the supplied bolt [male] into the bracket-shroud hole. Visually align the bottom of the bracket-shroud parallel to the helmet front edge. Line up the shroud-bracket hole with the helmet hole. Align the bolt and nut. Slowly tighten the bolt with a Phillips screw driver as you align and seat the bracket-shroud to the helmet contour. Finish tightening when seated and aligned. Periodic re-tighten is strongly recommended, especially when exposed to high temperatures [summer or desert conditions].