

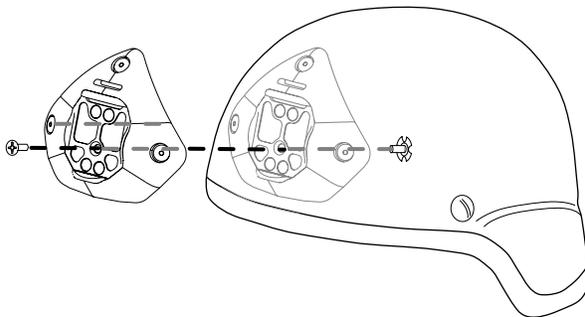


Technical Data Sheet Universal Shroud Norotos Assembly Number 1817010 BC 5-09

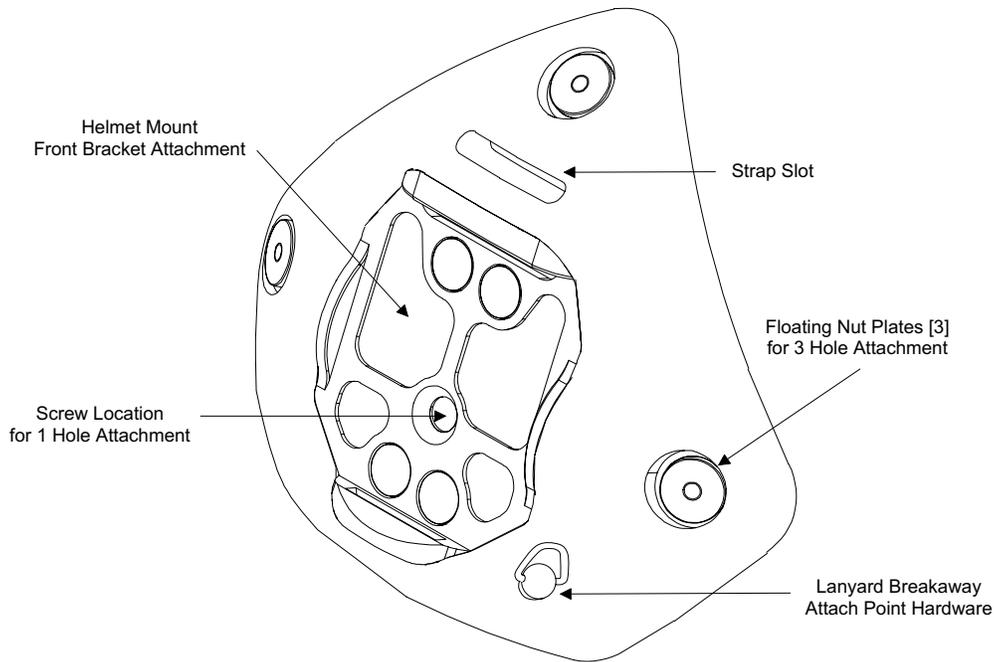

One [1] Hole Shroud Installation: Remove 3 pre-installed screws & washers from the shroud. From the inside of the helmet, insert the Norotos supplied sex bolt into the hole in the helmet. From the outside of the helmet, line up the bracket hole with the helmet hole. Place the Norotos supplied screw thru the shroud into the sex bolt in the helmet. Slowly tighten the screw as you seat and align the shroud to the helmet contour. Finish tightening when seated and aligned. Check periodically and re-tighten as required.

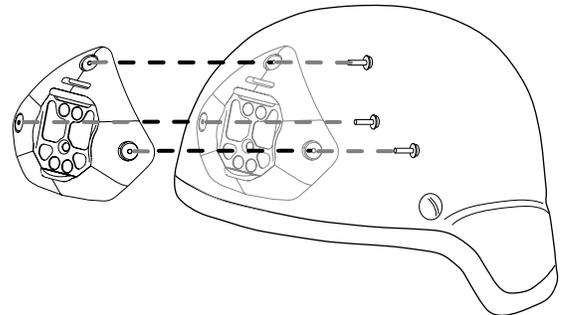

Three [3] Hole Shroud Installation: Remove the 3 pre-installed screws & washers from the shroud. Install one [1] of the Norotos supplied screw with washer thru the top hole from inside the helmet into the top Floating Nut Plate in the Shroud [helmet bracket]. Align and Install the other two [2] screws with washers thru the holes from the inside of the helmet into the Floating Nut Plate. **Note: The Floating Nut Plates are designed to move to accommodate minor differences in the helmet hole pattern.** Slowly tighten the screws as you seat the shroud [helmet bracket] to the helmet contour. Finish tightening as required when seated and aligned. Check periodically and re-tighten as required.

PROPRIETARY NOTICE This document is the trade secret/confidential property of NOROTOS, INC. and is conveyed with the express condition that the proprietary information and data contained in it are not to be used, disclosed, or reproduced in whole or in part for any purpose with out the express written consent of NOROTOS, INC. No right is granted by NOROTOS, INC. to disclose it to others or to use any information contained in said data to replicate or manufacture our products, other than by our express written direction.