

# UTG PRO<sup>®</sup>

## LEAPERS<sup>®</sup>

### **NORTH AMERICA - HEADQUARTERS**

32700 Capitol Street  
Livonia, MI 48150 U.S.A.  
Tel: (734) 542-1500  
Fax: (734) 542-7095  
office@leapers.com  
www.leapers.com

### **EUROPE**

Am Bahndamm 7  
63683 Ortenberg, Germany  
Tel: +49 (0) 6041 - 969686 0  
Fax: +49 (0) 6041 - 969686 66  
info@utgeurope.com  
www.utgeurope.com

### **ASIA**

No.36, Qunyi Rd., Zhunan Township  
Miaoli County 350, Taiwan (R.O.C)  
Tel: +886 (0) 37 580333  
Fax: +886 (0) 37 580337  
conseil@utg-taiwan.com  
www.utgtaiwan.com



# MP5 M-LOK<sup>®</sup> MONOLITHIC HANDGUARD

## USER MANUAL



www.leapers.com

## FEATURES

- Monolithic Design Combines M-LOK® and Optics Real Estate into One Rigid Mount
- 6061-T6 Aluminum with Dehorned Corners and Melted Contours and Finished in H-146 Graphite Black Cerakote®
- Patented Claw Mount Locking Interface
- Extended 16 Slot Picatinny Flat-Top with Cutout for Serial Number Identification
- 17 Full and 5 Half M-LOK® Slots Around Circumference of Handguard
- Chamfered Locking Recess Notch Prevents Hot Spots and Snag Points while Manipulating Charging Handle
- Overall Lightweight at 9.8oz Installed
- Integral Left and Right Side Anti-rotational QD Sockets
- Designed for 9mm Receiver MP5 and Clones and Compatible with Most Collapsible and Fixed Stocks

	MTU055SSM
Upper Length	13.65"
Lower Length	5.56"
Installed Length	13.65"
Width	1.69"
Upper Height	1.45"
Lower Height	1.43"
Total Height	2.07"
Upper Picatinny Slots	16
Lower Picatinny Slots	N/A
Upper M-LOK® Slots	6(Full) / 1(Half)
Lower M-LOK® Slots	11(Full) / 4(Half)
Weight	9.8 oz

## OVERVIEW

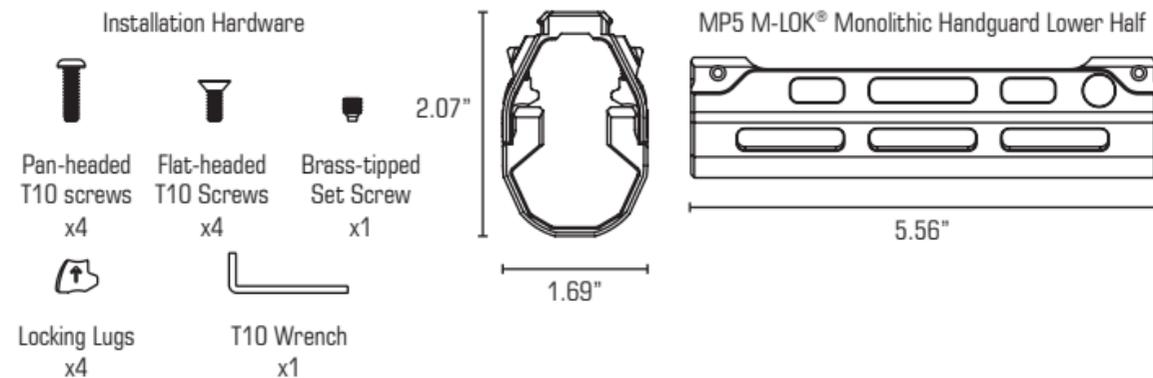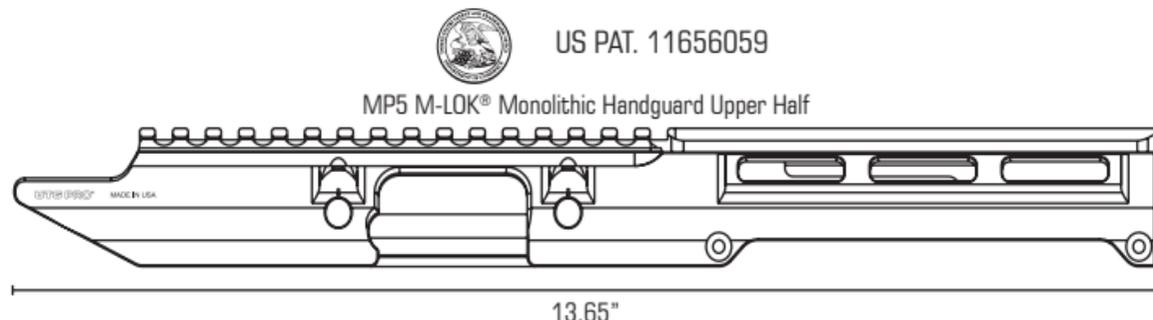

**⚠ WARNING:** Ensure the firearm is unloaded by confirming the chamber is empty and the magazine is removed. Follow all rules of firearms safety.

## HANDGUARD INSTALLATION: UPPER HALF



Remove the handguard and handguard retainer pin. Lock charging handle to the rear in its locking recess notch.



Place the upper half of the handguard over the top of the receiver making sure the charging handle passes through and the receiver's claw mount interface is aligned with the handguard's corresponding mounting holes. There are four mounting holes, two on the left and two on the right side of the handguard.



Four locking lugs are included and are individually engraved with an arrow symbol. Insert each locking lug through the mounting holes with their arrows pointed upwards.



Thread the four pan-headed T10 screws into the locking lugs. Once threaded, proceed to tighten each screw evenly by alternating between them using the included T10 wrench.

Recommended torque value is 20in-lbs. The use of thread locker can optionally be applied.



Thread the included brass-tipped set screw into the corresponding threaded hole located on the top of the handguard and just behind the front sight. Using the included T10 wrench, tighten the set screw until it makes contact with the cocking tube. (Do not over tighten)

The use of thread locker is recommended.

**⚠ WARNING:** Ensure the firearm is unloaded by confirming the chamber is empty and the magazine is removed. Follow all rules of firearms safety.

## HANDGUARD INSTALLATION: LOWER HALF



Orientate the lower half of the handguard so that its integral QD sockets are towards the muzzle.



Insert the lower half of the handguard upwards from below the barrel. Align its threaded screw holes with that of the countersunk holes in the upper half of the handguard. This may be a tight fit and some resistance may be encountered.



Thread the four flat-headed T10 screws. Once threaded, proceed to tighten each screw evenly.

Recommended torque value is 20in-lbs. The use of thread locker can optionally be applied.

Function check firearm for normal operation.

## THE BEST NEVER REST WARRANTY - LIFETIME

Leapers, Inc. warrants that all products conform to published specifications and are free from defects in material and workmanship. Leapers, Inc. will repair or replace a defective product for the duration of the product's life span. Verification through a Return Authorization (RA) number is required. If the product is discontinued, credit in the amount of the product's MSRP may be applied toward a replacement item.

**NOTE:** Our warranty does not extend to theft, loss, deliberate, accidental, or cosmetic damages, negligence, misuse, disassembly beyond normal maintenance, or any unauthorized repair or alteration.

Please take caution when purchasing products on the secondary market. A Leapers product that is purchased secondhand is always at the buyer's own risk. We cannot guarantee that the product you purchased is genuine without a serial number or complete with all necessary parts unless returned and inspected.

Leapers reserves the right to confiscate counterfeit products based on our intellectual property rights and usage and always recommends purchasing Leapers products through reputable retailers.

Please feel free to call us at (734) 542-1500, email us at [office@leapers.com](mailto:office@leapers.com), or submit a warranty request form via our website at [www.leapers.com/contact](http://www.leapers.com/contact) for warranty and customer service inquiries.