

MAINTENANCE: Wiley X lenses are specially coated to offer superior abrasion resistance. Please follow below instructions to prolong the life of your lenses and keep them performing at their best:

- Clean lenses with water only.
- Do not use solvents or special cleaners.
- Use micro-fiber cleaning cloth provided to gently wipe clean.
- Never use paper products to clean and avoid wiping lens surface when dry and/or dirty as this may potentially scratch the lens.

WARNING: Wiley X brand eyewear is tested tough. However, impact resistant eyewear is not unbreakable and does not provide unlimited eye protection under all circumstances and conditions. Misused, abused, scratched and/or damaged eyewear can reduce impact protection (and void your limited warranty). Dirty and/or wet eyewear can impair vision and reduce safety (resulting in personal injury and/or property damage). Keep your Wiley X eyewear clean with water only. Do not use solvents or abrasives as it could scratch or damage the product reducing its effectiveness. Store your Wiley X eyewear in the protective case provided to prolong the life of the lenses. Most of all, take all appropriate precautions when wearing your Wiley X eyewear during hazardous and/or dangerous activities and conditions. Wiley X, Inc. is not responsible for personal injury, property damage or losses incurred while using Wiley X brand products.

WILEY X INC: 1.800.776.7842 // 925.243.9810 // WILEYX.COM

7800 PATTERSON PASS ROAD, LIVERMORE CA 94550 USA

WILEY X EUROPE LLC: +45 96 9 3 00 45 // WILEYX.EU


SØNDERGADE 8-10 7570 VEMB DENMARK WSCARD REV1



WORKSIGHT SIDE SHIELD REMOVAL AND ASSEMBLY


COPYRIGHT © 2015 WILEY X, INC. ALL RIGHTS RESERVED.

WILEY X, WX, BLACK OPS, logos, tag lines and product names are trademarks or registered trademarks (marcas registradas) of Wiley X, Inc. in the U.S. and other countries. Logos © 2007-2015 Wiley X, Inc. All rights reserved.

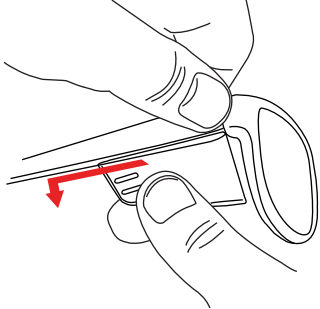

REMOVAL

To remove the side shields firmly grasp the temple arm and the side shield. Move the shield back toward the temple tip. You will hear the click as the side shield unlocks from the temple arm.

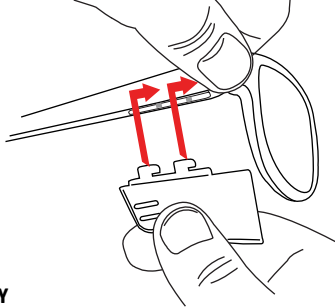

ASSEMBLY

To assemble the side shields into the frame, fully insert the side shield “hooks” into the temple arm. Firmly grasp the temple arm and grasp the side shield. Slide the shield toward the face frame firmly until there is an internal snap to lock the side shield into position. The side shield is not fully attached until it is snapped [you will hear the click].